

1. Testing: Static IP testing with Lan Port:

Re: For this kind of testing, you need to install our DVR_Server software to build a Local network server, and change the " Server IP" to be your computer IP address.

Login info: Server IP= your computer static IP

Port: 9001

Name: adminname

Password: adminpass